

Lite

Ceramic coating


# Instruction manual

## PRECAUTIONS:

- Wear protective gloves / clothing / eye protection / face protection.
- Keep out of reach of children.
- Test the product on an inconspicuous area before applying.


## INSTRUCTIONS:

**1**

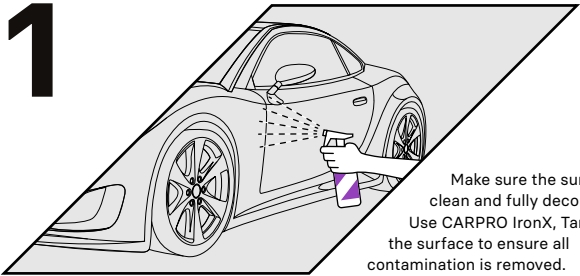


Make sure the surface is clean and fully decontaminated. Use CARPRO IronX, TarX and clay the surface to ensure all contamination is removed.

**2**

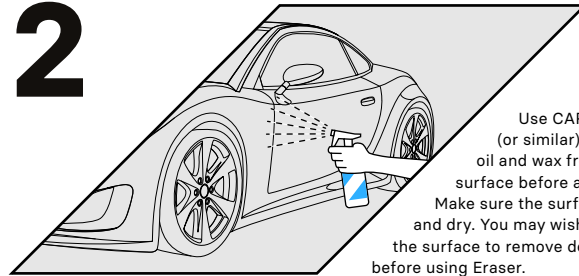


Use CARPRO Eraser (or similar) to remove oil and wax from paint surface before application. Make sure the surface is cool and dry. You may wish to polish the surface to remove defects before using Eraser.

**3**

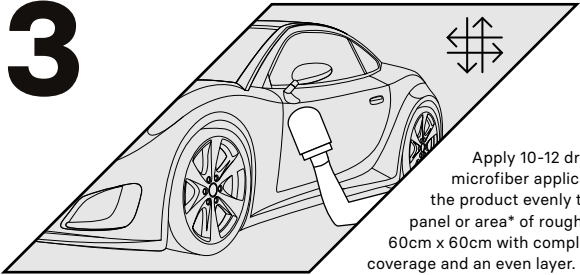


Apply 10-12 drops on a microfiber applicator; apply the product evenly to one small panel or area\* of roughly 24x24" / 60cm x 60cm with complete coverage and an even layer.

**4**

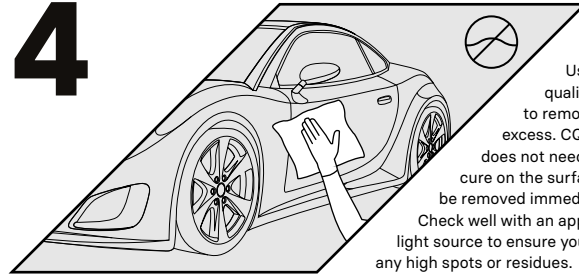


Use a high quality microfiber to remove any excess. CQUARTZ Lite does not need to be left to cure on the surface so should be removed immediately. Check well with an appropriate light source to ensure you remove any high spots or residues.

**5**

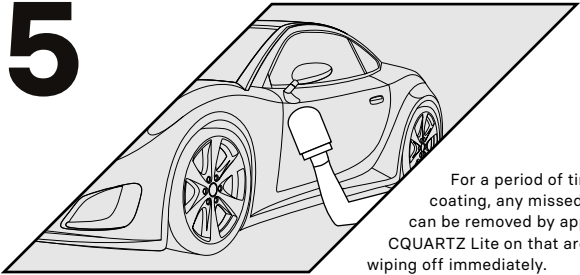

For a period of time after coating, any missed high spots can be removed by applying more CQUARTZ Lite on that area and wiping off immediately.

**6**

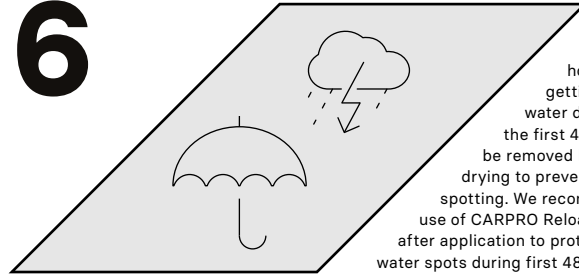

Leave to dry for 4 hours prior to getting wet. Any water drops during the first 48h should be removed before drying to prevent water spotting. We recommend the use of CARPRO Reload 1 hour after application to protect from water spots during first 48h.

\*small panels such as front wing/quarter panel or half of door.